


DUGOUT DIRECT

REMOTE — QUICK REFERENCE

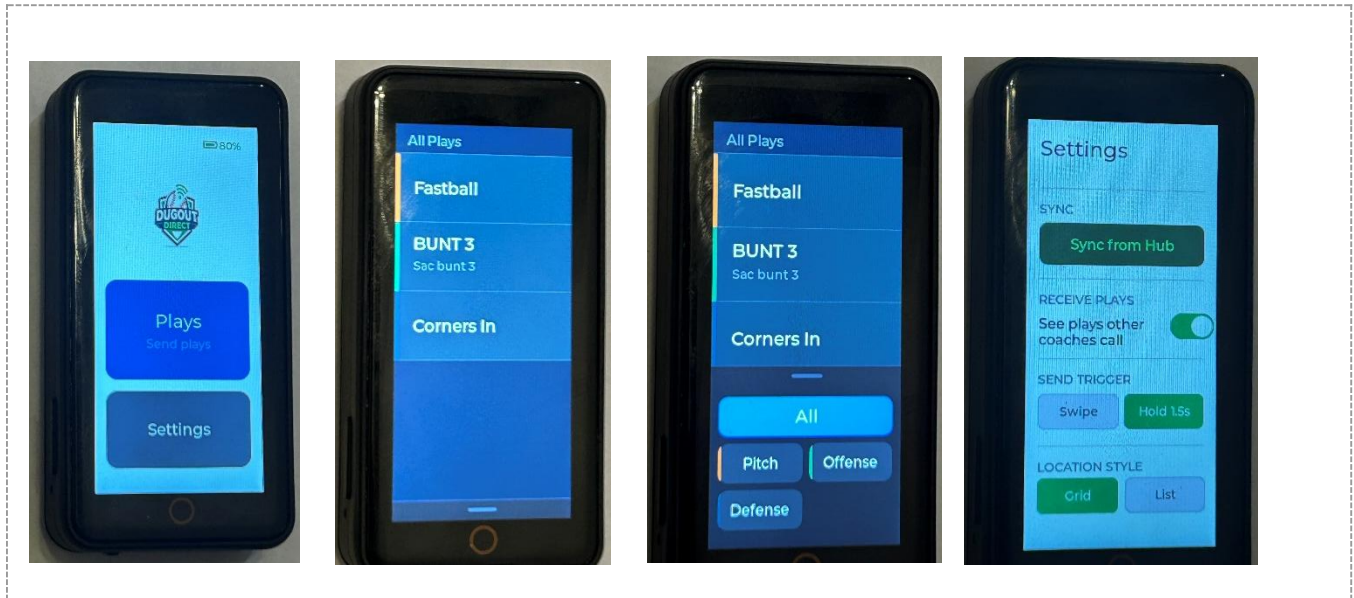

HOW TO

Power On	Press and hold the power button (right side).
Power Off	Hold the power button for 3 seconds until "Power Off" appears on the screen.
Send a Play	If Send Trigger is set to Hold, press and hold for 1 second (a bar sweeps across the card as you hold). If set to Swipe, swipe the card left or side, then tap send
Filter by Category	From the plays screen, swipe bottom handle up to reveal category tray
Change Send Trigger	Settings → Send Trigger — choose Swipe or Hold.
Sync with the Phone	Settings → Sync — pulls the latest plays, categories, and pitch locations from the paired phone.
Receive Plays	Settings → Receive Plays — when on, a play called from another coach's phone or remote also pops up here.

TROUBLESHOOTING

Remote turned off by itself	Normal after 30 minutes with no touches. Press the power button to turn it back on.
Plays aren't sending	Confirm the Hub is powered on and nearby.
Not seeing other coaches' plays	Confirm Receive Plays is turned on in Settings.
Sync doesn't seem to be working	Confirm the phone app is open and connected to the Hub, then try Sync again from Settings.